




HID Conversion Kit Install Guide

Important Notice:

The following demonstration is for the reference of professional automotive installer **ONLY**. All Xetronic products require installation by professional, warrant may void and we are not responsible for improper installations by non-professionals.

Step 1:

Turn off the vehicle. Remove the original halogen bulb from the light housing.

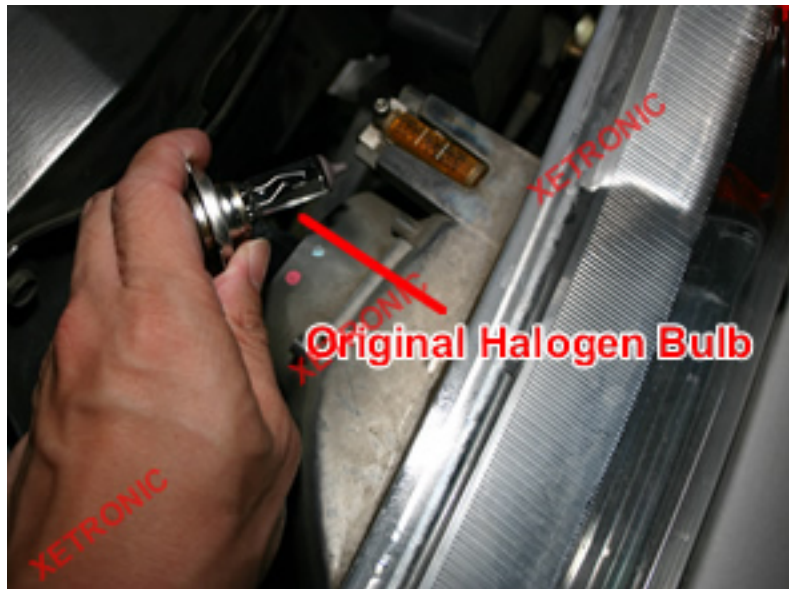

Step 2:

Carefully remove the clear plastic HID bulb protector. **DO NOT TOUCH** the bulb by hand.




Step 3:

Carefully insert the HID bulb module into the light housing of the vehicle.




Step 4:

Make sure the HID bulb module is secured in position tightly to prevent water leak into the light housing.

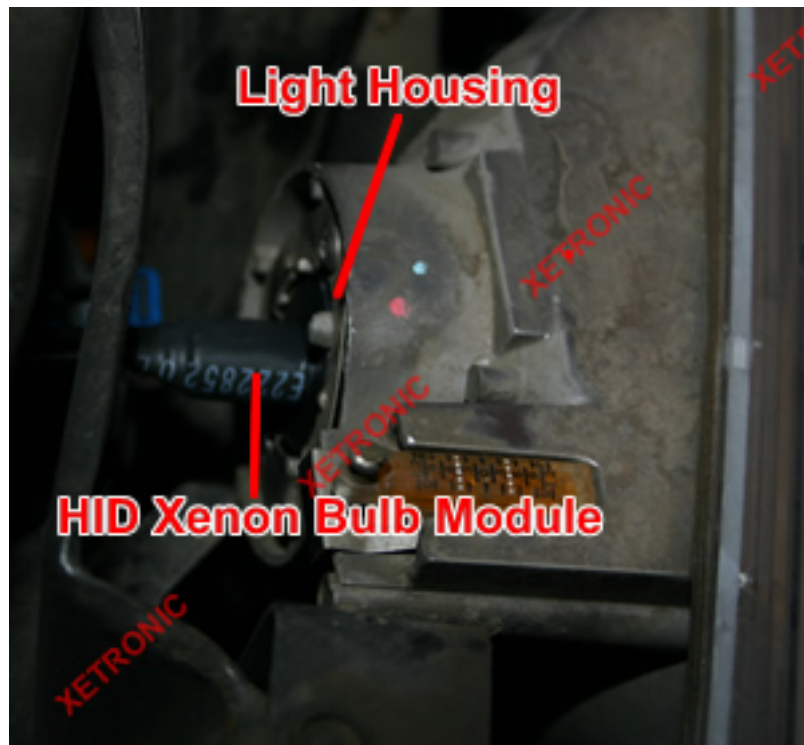


Step 5:

Picture shows two cables from the HID bulb module.

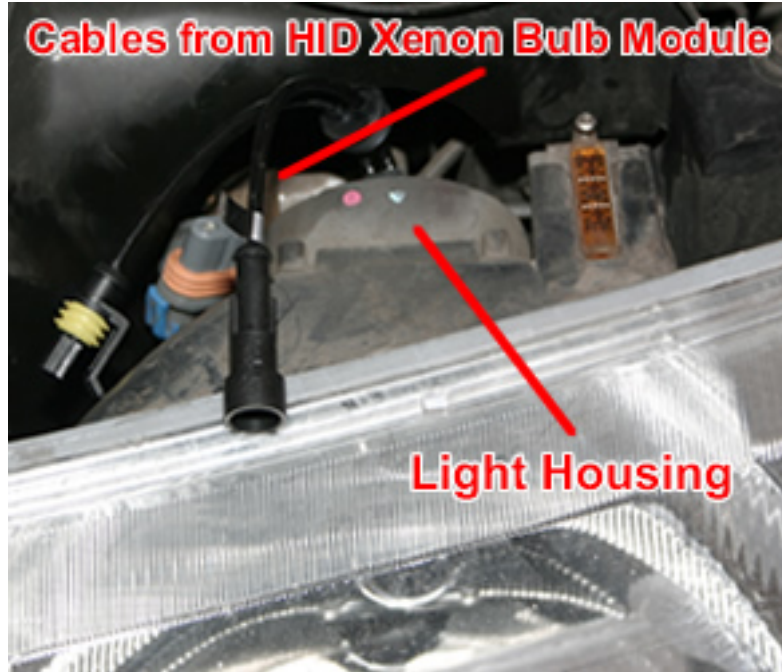

Step 6:

Firmly attach the metal tabs to the white and black wires from the Igniter module. Make sure the metal tabs have good contacts with the metal tips of the wires.

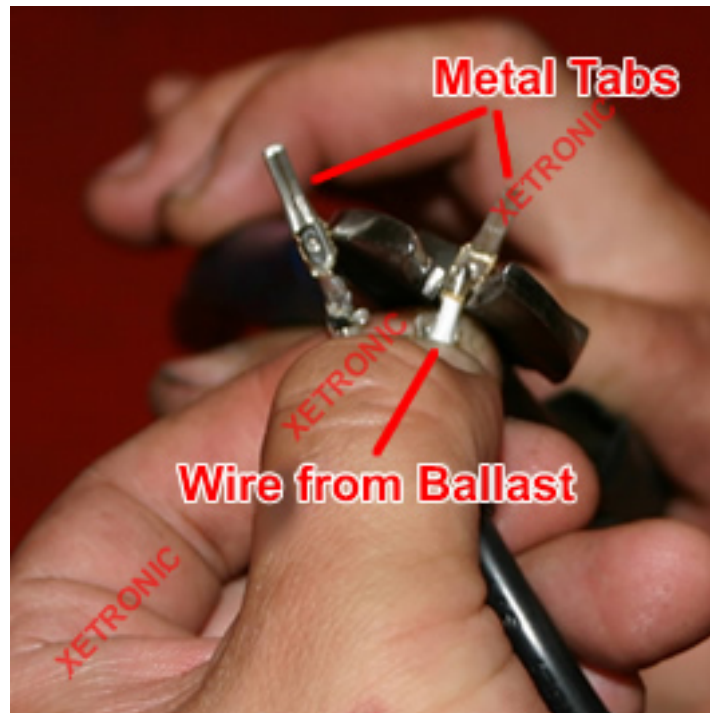

Step 7:

Insert the white and black wires with the attached metal tabs to the plastic power connector cap.



Step 8:

Make sure the white and black wires are firmly inserted into the connector cap.



Step 9:

Locate an open space in the vehicle where there is least heat and chance of contacting water. Securely mount the ballast module in the vehicle.



Step 10:

Locate an open space in the vehicle where there is least heat and chance of contacting water. Securely mount the igniter module in the vehicle.




Step 11:

Firmly connect the power connector cap from the igniter module to the original light power connector of the vehicle.



Step 12:

Firmly connect the two cables from the HID bulb module to the two cables from the ballast module.

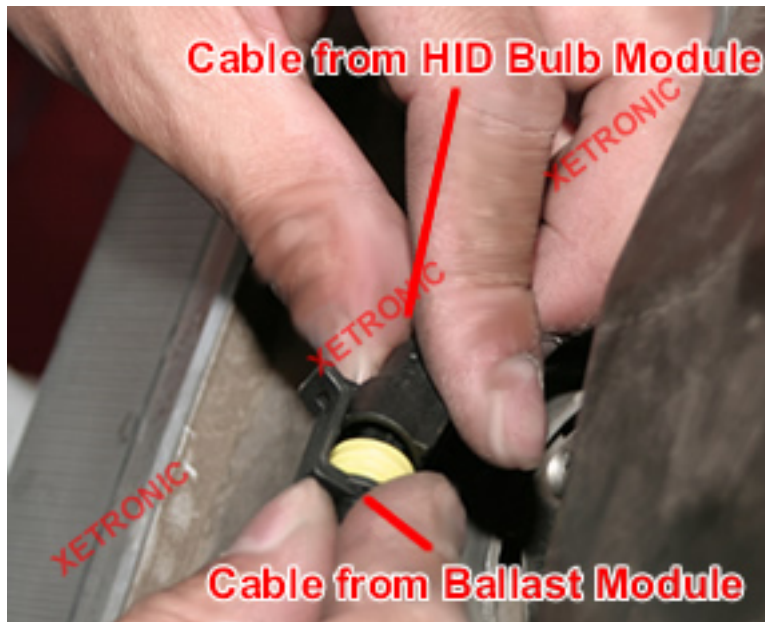

Step 13:

Turn on the vehicle and lights.

Make sure to adjust the angle and direction of the light beams to avoid excessive glare projecting to approaching traffic.

