



Front and Rear Dome Light Removal and Installation

BEFORE PROCEEDING READ THE FOLLOWING DISCLAIMER:

The information contained on this website is anecdotal, is provided by non-professional LS owners, and is not endorsed by LS Koncepts. Hopefully readers will find this information useful; however they should use caution and common sense before undertaking any of the procedures described, as working on automobiles may be dangerous. LS Koncepts makes no representations of the effect non-professional modifications or servicing may have upon the warranty or safe operation of your vehicle.

Front and Rear Dome Light Replacement for 2000-2002 Lincoln LS's. (note: this may not be the same procedure for the 2003 or 2004 LS's)

Tools needed:

- T-20 Torx Bit Screwdriver
- Flat head screwdriver
- Replacement bulbs (#211 or #212 either will work)

FRONT DOME LIGHT REPLACEMENT GUIDE

1. Pry the plastic cover off of the sun visor that is covering the screws. Use the T-20 torx screw driver to remove the three screws. You can let the sun visor hang with the wires attached. As long as you don't pull on the visor it will be OK.



2. Remove the T-20 torx screw from the sun visor rest and remove. (Sorry about the fuzzy picture)



3. Pry the plastic covers off of the grab handle and remove the two T-20 torx screws. Remove grab handle.




4. Repeat steps 1-3 for the passenger side.
5. Once the sun visors, clips and grab handles are removed take out the A-Pillar covers. They are held in with clips so you may have to give it a firm pull on each side. Once out just lay them on the dash.
6. Gently pull down the front of the headliner to expose the back of the front dome light assembly. There are four clips holding the cover on. Use a small screwdriver to press the clips and push the cover down from under the headliner. Once all four clips are depressed the cover should come apart from the headliner. See picture below for the clip locations:



7. After the cover is off the bulbs will be exposed. Take them out and replace as needed.




8. Once bulbs are replaced reverse steps 1-6 to re-install the front dome light assembly cover. Below is the bulb replacement picture:

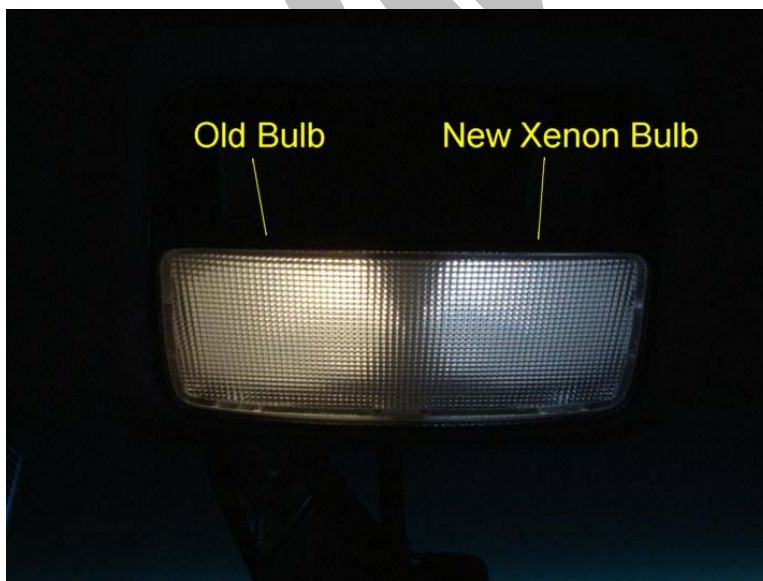

REAR DOME LIGHT REPLACEMENT GUIDE

1. There are four clips holding the rear dome light cover on. Take a small screw driver, gently slide it underneath the cover that is facing the front of the car. (Caution: Make sure your screwdriver isn't dirty while doing this) Using my picture locate the clips and press it with the screwdriver while gently pulling the cover down. Do this for the other front clip and the cover should come down half way. Once the front clips are loose you can gently pull down and the other clips should release. If they don't like mine did you will have to take them out of the housing. See the picture below to see the clips that were left in the housing. If clips are in the housing be very careful that you don't push them up and into the headliner. Once the cover and clips are out you can replace the dome light as needed.

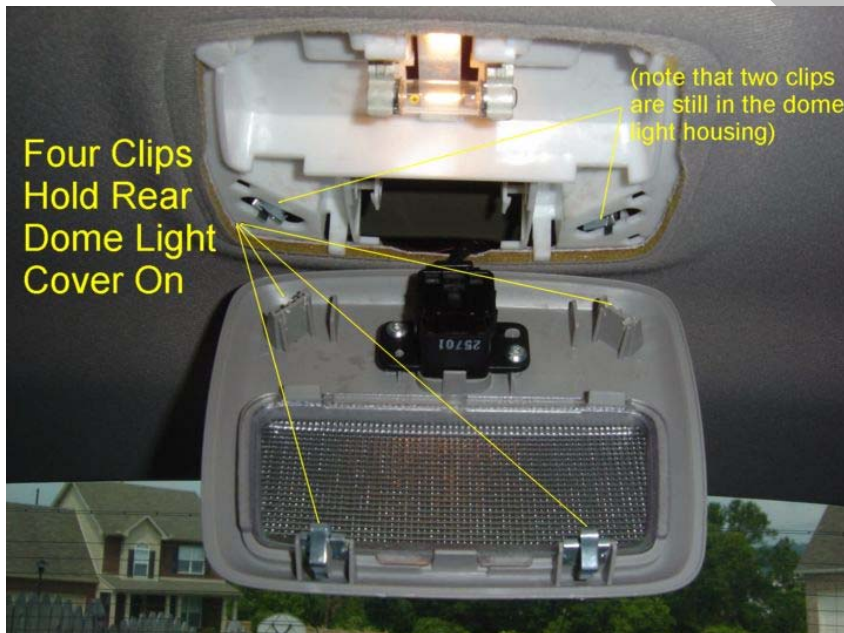

2. To install the cover just snap the cover back on and your done.

This should take about hour and a half to replace both front and back bulbs. Take your time. Remember your dealing with plastic clips that can break. On a scale of 1-10 with 10 being the most difficult I would rate this project as a 4. It's not terribly difficult to do but it does require some patience.